



# OCEAN SECURITY SYSTEMS

BURGLAR & FIRE ALARM SYSTEMS

131 LAUREL AVENUE • SUITE 1

P.O. BOX 1349

ISLAND HEIGHTS, NJ 08732

(732) 270-1784 • FAX (732) 506-6592

## Everyday Functions for Ademco Alarm Systems

**System Status** – By pressing the asterisk key (\*) the system will display any open zones or trouble conditions. The status of the system must be (Ready) for the system to arm. If the zones cannot be cleared you may bypass them by utilizing the bypass feature below.

**Disarming** – To disarm (shut off) the system enter your four digit code number followed by the off [1] key.

**Armed Away** – used when no one will be inside of the house including pets. This mode will activate both perimeter and interior protection. To activate this mode, enter your four-digit code number followed by the away [2] key.

**Armed Stay** – used when someone will be remaining inside the house. This mode will only activate perimeter protection. The interior zones will be automatically disabled. This mode will still allow entry through the entry doors to disarm system. To activate this mode, enter your four-digit code number and the Stay [3] key.

**Armed Instant** – used when all occupants will remain inside the house. This mode will only activate the perimeter protection. This mode will also remove the delay on the entry doors. No time is given to enter and disarm the system. To activate this mode, enter your four-digit code and the Instant [7] key.

**Chime Mode** – is used to announce when a perimeter zone is opened. The keypad will emit three short beeps whenever a door or a window is opened. To activate this mode, enter your four-digit code number followed by the chime [9] key. To deactivate this mode, enter your four-digit code number followed by the chime [9] key.

**Bypass** - The bypass feature is used to bypass (shut off) a zone temporarily. To bypass a zone, enter your four-digit code number followed by the six [6] key followed by the two digit zone number.

**Silencing and Resetting the Alarm** – To silence the sirens after an alarm activation, enter your four digit code number followed by the number one key [1]. Wait for a phone call from Securall and give them the proper password to avoid the police from being dispatched.

- If a burglar alarm zone went off enter your code number followed by the one [1] key to reset the alarm.
- If a fire alarm zone activated, before resetting the alarm you must locate the detector with a solid red light. Make a note of the detector with the solid red light, this is the detector that activated the alarm. Now you can enter your four-digit code number followed by the one [1] key to reset the system.

\* These are basic instructions and not the only functions of your alarm system. All of these functions may not pertain to your alarm systems as functions vary between models. Please consult your full users manual or Contact Ocean Security Systems for further assistance.